


# ELRP48V-30 Connection Diagram

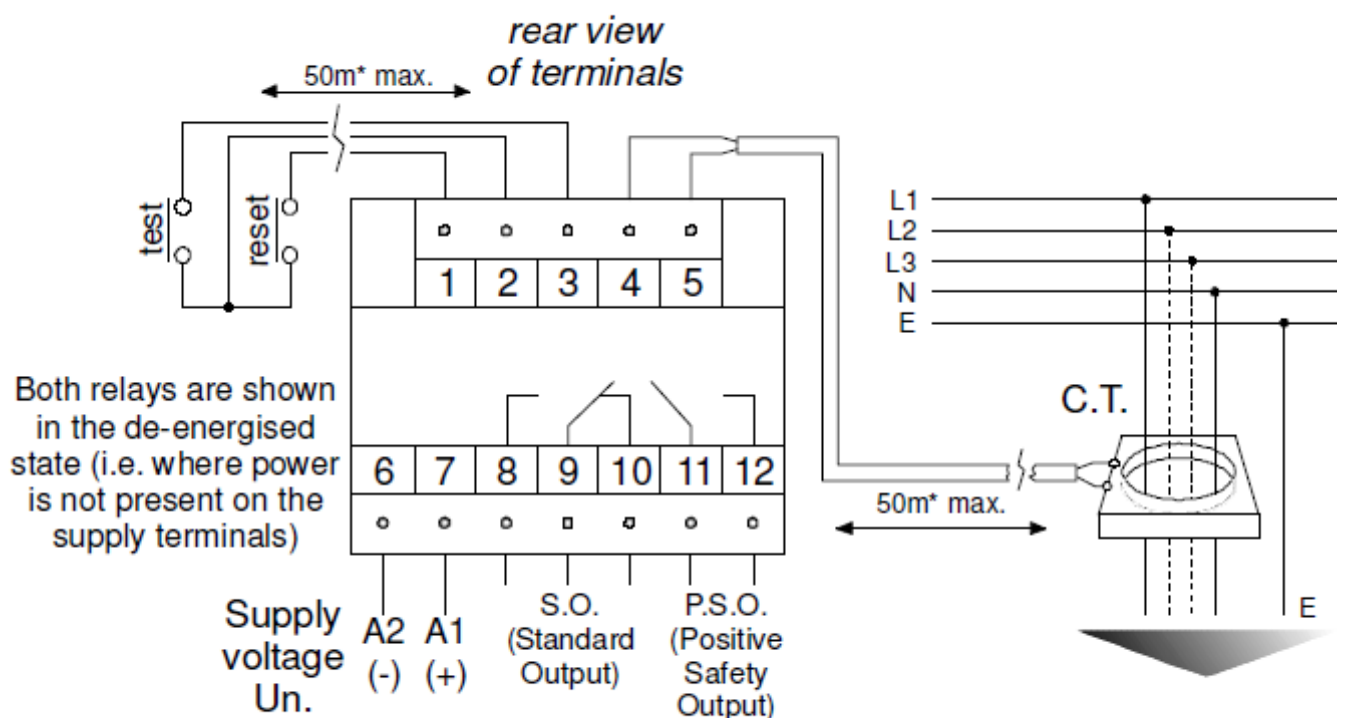

The Earth **MUST NOT** pass through the C.T. For single phase applications, only the live and neutral need to be passed through the C.T.  
 \*Cabling:  
 For distances >1m, use twisted pair cable between the unit and C.T.