

Terminal Protection to IP20

43880 W. 17.5mm




NEW 17.5mm DIN rail housing

 \Box Microprocessor based

True R.M.S. monitoring

- Monitors own supply and detects an Under voltage condition on one or more phases
- \Box Measures phase to neutral voltages
- Detects incorrect phase sequence, phase loss and neutral loss
- Adjustment for Under voltage trip level
- Adjustment for Time delay (from an Under voltage condition)
- 1 x SPDT relay output 8A
- Green LED indication for supply status
- Red LED indication for relay status



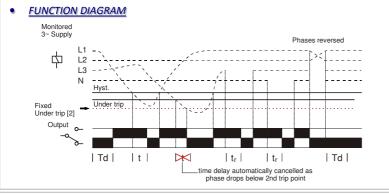

INSTALLATION AND SETTING

Installation work must be carried out by qualified personnel.

- BEFORE INSTALLATION, ISOLATE THE SUPPLY.
- Connect the unit as required. The Connection Diagram below shows a typical installation, whereby the supply to a load is being monitored by the Phase monitoring relay. If a fault should occur (i.e. fuse blowing), the relay will de-energise and assuming control of the external Contactor, de-energise the Contactor as well.

- Set the "<U (volts)" and "Delay (t)" adjustment to minimum
- Apply power and the green "Power supply" 1 and red "Relay" 2 LED's will illuminate, relay energise and contacts 15 and 18 will close. Refer to the troubleshooting table if the unit fails to operate correctly.

Setting the unit (with power applied).

- Accurate setting can be achieved by adjusting the trip level "<U (volts)" until the unit trips (relay deenergises) then by decreasing the trip level "<U (volts)" until the relay re-energises. Close setting the trip level ensures the unit will detect a phase loss even with a large percentage of re-generative voltage.
- In order to set the unit as previously described but without causing disruption to the equipment being controlled/monitored, set the "Delay (t)" to maximum. It will now be possible to establish the trip point when the red "Relay" LED starts to flash. Decrease the trip level setting to stop the LED flashing. (Note: If the time delay is allowed to expire, the output relay will de-energise)
- If large supply variations are anticipated, the trip level should be set further from the nominal voltage.
- Set the "Delay (t)" as required. (Note that the delay is only effective should the supply drop below the set trip level. However, if during an under voltage condition the supply drops below the $2^{\mbox{\tiny nd}}$ under voltage trip level, any set time delay is automatically cancelled and the relay de-energises). Note: If the supply voltage increases above the maximum "<U" trip setting by approx. 10% or more, the relay will de-energise immediately

Troubleshooting.

The table below shows the status of the unit during a fault condition.

Supply fault	Green LED	Red LED	Relay
Phase or neutral missing	On	Off	De-energised
Phases reversed (no delay)	Flashing	Off	De-energised
Under Voltage condition (during timing)	On	Flashing	Energised for set delay (t)
Under Voltage condition (after timing)	On	Off	De-energised
Phase below 70% of Un (fixed under trip level [2])	On	Off	De-energised


TECHNICAL SPECIFICATION Supply/monitoring voltage U* (L1. L2. L3. N): 63.5V (110V), 133V (230V), 230V (400V)¹ AC (see note) Frequency range 48 – 63Hz Supply variation: + 30% III (IEC 60664) Overvoltage category: Rated impulse withstand voltag ¹4kV (1.2/50μS) IEC 60664 Power consumption (max.): 6VA Monitoring mode: Under voltage Under [2] Unde Trip levels 63.5V: 48 – 79V Supply voltage 44.5V 100 - 166V 133V 161V 173 - 288V 230V Hysteresis: ≈ 2% of trip level (factory set) Setting accuracy: ± 3% Repeat accuracy: ± 0.5% at constant conditions Immunity from micro power cuts <50mS Response time ≈ 50mS 0.2 – 10 sec. (± 5%) Time delay (t): Note: actual delay (t) = adjustable delay + response time Delay from Phase/Neutral loss (tr): ≈ 150mS (worst case = tr x 2) ≈ 1 sec. (worst case = Td x 2) Power on delay (Td) Power on indication: Green LFD Relay status indication Ambient temp: -20 to +60°C Relative humidity: +95% Output (15, 16, 18) SPDT rela 250V 8A (2000VA) Output rating: AC1 AC15 250V 5A (no), 3A (nc) DC1 25V 8A (200W) Electrical life: ≥ 150,000 ops at rated load Dielectric voltage 2kV AC (rms) IEC 60947-1 Rated impulse withstand voltage: 4kV (1.2/50µS) IEC 60664 Housing: Orange flame retardant UL94 Weight: On to 35mm symmetric DIN rail to BS EN 60715 Mounting option: or direct surface mounting via 2 x M3.5 or 4BA screws using the black clips provided on the rear of the unit. Terminal conductor size \leq 2 x 2.5mm² solid or stranded Conforms to IEC Approvals: (PL) IND. CONT. EQ. LISTED CE. Cand RoHS Compliant.

The "Supply / monitoring voltage U" refers to the phase to neutral nominal voltage for the product and voltage variants available. To convert these voltages to a phase to phase voltage, multiply by 1.732. The voltage shown in brackets is the equivalent phase to phase voltage.

80MHz - 2.7GHz)

Fmissions: FN 61000-6-4

CONNECTION DIAGRAM

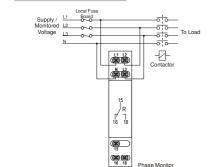



SETTING DETAILS

(Green) LED 2. Relay output / Timing status (Red) LED 3. "Delay" adjustment 4. "<U (volts) Under voltage trip level adjustment^a

1. Power supply status

^Example on the right shows the 230V (400V) version. The voltages shown on the scale are phase/line to neutral voltages.



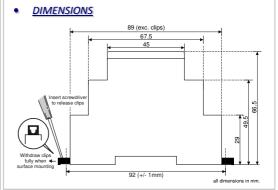

EMC: Immunity: EN 61000-6-2 (EN 61000-4-3 15V/m

Broyce Control Ltd., Pool Street, Wolverhampton, West Midlands WV2 4HN. England