

Type: ELRP48V-30


Earth Leakage Relay (Variable) - Type A

- 76mm length¹, 48 x 48mm Panel mount housing - Supplied complete with retaining clips and screws
- Pluggable connectors located at the rear of the unit and supplied with mating, re-wireable sockets
- Designed to monitor and detect true RMS earth fault currents (up to 30A) in conjunction with a separate C.T.
- LED bargraph provides constant indication of any leakage current
- Microprocessor controlled with internal monitoring (self-checking)
- Adjustable Sensitivity (I Δ n) - 30mA to 30A
- Adjustable Time Delay (Δ t) - 0 (instantaneous)* to 10 seconds
- Separate "Test" and "Reset" push buttons
- Connection facility for remote "Test" and "Reset" push buttons
- Toroid open circuit detection forces unit to trip (Red LED flashes during this condition)
- 2 Relay outputs - Standard Output (S.O.) and Positive Safety Output (P.S.O)
- LED indication of Supply status and fault condition after unit has tripped



¹ behind panel and excluding pluggable connectors.

FUNCTION DIAGRAM

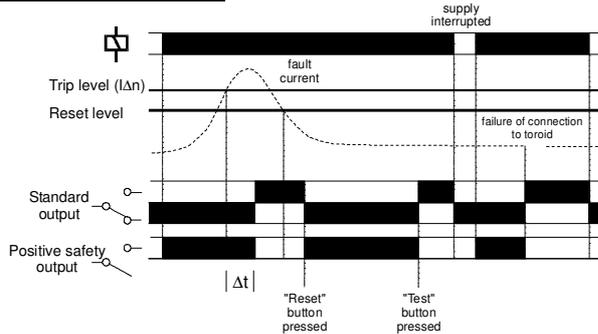

TECHNICAL SPECIFICATION

Supply voltage Un (6, 7):	12 - 125V DC (85 - 110% of U)	Please state Supply voltage when ordering.
(see connection diagram)	24, 115, 230V AC (85 - 115% of Un)	
All AC supplies are galvanically isolated between the supply and the toroid and remote test/reset connections.		
Frequency range:	50/60/400Hz (AC supplies)	
Isolation:	Over voltage cat. III	
Rated impulse withstand voltage:	800V (24V AC supplies), 2.5kV (115V AC supplies)	
(1.2 / 50 μ s) IEC 60664	4kV (230V AC supplies)	
Power consumption (max.):	6VA (AC supplies) 5W (DC supplies)	
Monitored leakage current:	0 to 30A (15 - 400Hz) (through external toroid with 1000:1 ratio and connected to terminals 4 and 5)	
Sensitivity I Δ n (see Accessories)	30, 100, 300, 500mA, 1, 3, 5, 10, 20, 30A (user selectable)	
Trip level limits:	80 - 90% of I Δ n	
Reset Value:	\approx 85% of tripped level	
Time delay Δ t:	0*, 60, 150, 250, 500, 800ms, 1, 2.5, 5, 10 sec. (user selectable)	
*Actual delay for "0" or "Instantaneous" is <25ms when fault current @ 5 x I Δ n.		

- Note:
- For I Δ n setting of 30mA, the time delay is fixed to 0 (instantaneous) and is not adjustable (i.e. any other time delay cannot be selected when 30mA is set).
 - The unit is factory set to 30mA trip and instantaneous delay. Adjustment of these settings can be made if necessary to suit the requirements of the installation. To prevent tampering of the settings, the clear window can be secured in place using a 2mm or 2.5mm wide cable tie (not supplied).

Reset time:	\approx 2S (from supply interruption)
LED indication:	
Power supply present:	Green
Bargraph:	Green x 3 (25, 50 and 75% of actual trip level)
Tripped:	Red (see "INSTALLATION" to the left)
Memory:	storage of the leakage fault and reset with the "Reset" push button
Ambient temp:	-20 to +55°C (-5 to +40°C in accordance with IEC 60755)
Relative humidity:	+95%
Output:	1 x SPDT, 1 x SPNO relays
Output rating:	S.O. (8, 9, 10) P.S.O. (11, 12)
	AC I (250V) 8A (2000VA) 6A (1500VA)
	AC I5 (250V) 2.5A 4A
	DC I (25V) 8A (200W) 6A (150W)
Electrical life:	\geq 150,000 ops at rated load
Dielectric voltage:	2kV AC (rms) IEC 60947-1
Rated impulse withstand voltage:	4kV (1.2 / 50 μ s) IEC 60664
Remote "Test" / "Reset" (1, 2, 3)	Requires N.O. contacts. (i.e. push buttons)
Minimum trigger time:	>80ms (Actual trigger time = 80ms + Δ t setting for remote "test")
Housing:	Black, self-extinguishing noryl UL94 V0 (ABS for front plate and rear clip)
IP Protection:	Terminals: IP20. Housing: IP30 (when clips are inserted)
Weight:	\approx 190g (AC power supplies) \approx 110g (DC power supply)
Mounting:	Through 45 x 45mm panel cut-out and secured to panel using retaining clips/screws (2 of each supplied). Panel thickness 4mm typ. \leq 2.5mm ²
Terminal conductor size:	\leq 2.5mm ²
Approvals:	Conforms to: IEC60755, 60947, 62020, 61543, IEC 61000-4-2, -3, -4, -5, -6, -12 and -16. CISPR 22. CE and RoHS Compliant.

- () Numbers in brackets shown above refer to terminal numbers on the relay housing.
- Options
 - For other supply voltages, alternative trip levels or time delays, please consult the sales office.
 - Accessories - Toroids (C.T.)

Toroid Type:	Internal diameter:	I Δ n (min.) A	Toroid Type:	Internal diameter:	I Δ n (min.) A
BZCT035	35mm \varnothing	0.03	BZCT120	120mm \varnothing	0.1
BZCT050	50mm \varnothing	0.03	BZCT160	160mm \varnothing	0.1
BZCT070	70mm \varnothing	0.03	BZCT210	210mm \varnothing	0.3

INSTALLATION

- BEFORE INSTALLATION, ISOLATE THE SUPPLY.** Installation work must be carried out by qualified personnel.
- Connect the unit as shown in the diagram below (N.B. certain features may not be required and therefore do not need to be connected).
- Apply power, the green "supply on" LED will illuminate and the "positive safety output" relay will energise. The relay will de-energise if:
 - the fault current level exceeds the set trip level (I Δ n)**
 - there is a failure of the connection between the relay and the toroid** (Note the red "tripped" LED will flash during this condition)
 - the supply to the unit is removed
 - the relay fails internally
- ** causes the "standard output" relay to energise in response to the fault condition.
- Prior to a fault occurring, the LED bargraph will indicate the % of I Δ n being detected (the display is scaled between 25, 50, and 75% of the actual trip level). After all 3 LED's have illuminated and the unit trips due to an excessive fault current, the red "tripped" LED will illuminate. The unit will now remain in a latched condition.

Fault simulation (Test mode)

- The unit can be placed into a fault condition by pressing the "Test" button on the front of the unit (or by pressing the remote "Test" button - if fitted). The output relays operate accordingly.
- Press the "Reset" button on the front of the unit (or remotely - if fitted) to reset the unit. The output relays revert back to their "non-tripped" state.
- The unit can also be reset by interrupting the power supply.
- To satisfy regulations, it is recommended that the device be tested periodically to ensure correct operation.


Troubleshooting

- If the unit fails to operate correctly check that all wiring and connections are good.
- For the DC supply version, ensure the polarity to terminals 6 and 7 (A1 and A2) are correct.

Note:

The operating function of this unit is classed as a Type A for which tripping is ensured for residual sinusoidal alternating currents and residual pulsating direct currents, whether applied suddenly or slowly rising. Additionally, this unit is protected against nuisance tripping $\sqrt{2}$. This unit will also satisfy the requirements for Type AC devices which only need to detect residual alternating currents.

CONNECTION DIAGRAM

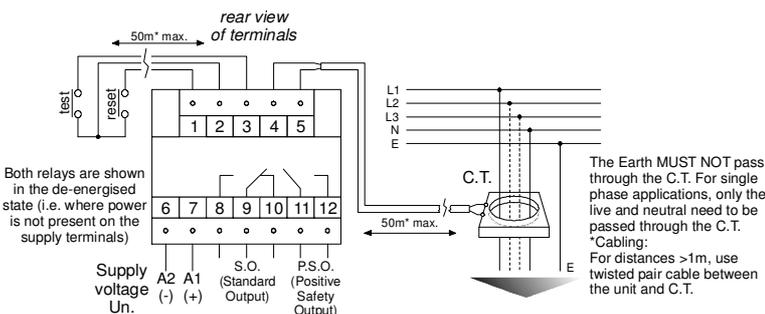

MOUNTING DETAILS

